

# DotShell

user manual

## This is the DotShell

Meet the DotShell, Atmizone's dedicated RTA for the dotAlO by Dotmod. Based on the VapeShell, yet taking quite some steps forward, the DotShell introduces all features of RTAs to the world of AlO devices. The DotShell utilizes the top part of dotAlO's stock reservoir, incorporates an adaptation of dotAlO RBA's afc system, but also offers a surprisingly large deck with real time access potential and further customisable air flow under coil, bringing the already succesful dotAlO to another level.

### What's in the box

- 1 x DotShell RTA (incl. dotAIO stock aux 510 Rebuild Base and Reservoir Top)
- 1 x Set of spares (2 x Post Screws, 1 x O-ring Kit, 1 x Pos. Tube D=2.0mm)
- 1 x Set of User Manual / Warranty Card


## Features and specs

- Air flow tuning via an AFCS Ring adjusting from zero to either D=3.8mm (stock Pos Tube) or D=2.0mm (spare Pos. Tube). Fine tuning with accessory MTL pins kit D=1.0/1.2/1.5mm
- M2.5mm pan head phillips post screws.
- 12.2mm post-to-post length, ~8.5mm post-to-post net space, ~8.0mm coil space.
- Max. net coiling height in the chamber 4.2mm
- Chimney top inner D ~4.0mm
- Height ~35mm [AFC section attached, Rebuild Base excl.] / Weight ~25g [AFCS section attached, Rebuild Base excl.]

#### The parts of the DotShell Reservoir Refill Cover -Top . O-Ring 6x1 Chimney Chimney Gasket Pos. Post Post Deck Gasket Screws Pos. Post Deck Insulator O-Ring 1.5x2 (Neg. Post) Pos. Tube Pos. Tube Insulator Materials List Stock - SS316 foodgrade main Pos. Tube device metal parts Spare AFCS Ring - PEEK Thermoplastic D=2.0mmInsulators O-Ring 9x1 - SS304 Post Screws AFCS Base 510 Aux. Base - food grade gaskets / o-rings English

# Vaping on the DotShell



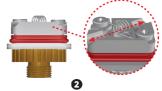

Grip on the tank section and pull up to access the deck. Unscrew AFCS section off the deck and screw the 510 Aux Base until fully in place.

TIP Before removing a full tank to access deck, you have to turn the DotShell upside down. If not, the liquid will pour through the liquid holes, which are placed at bottom of the tank section / ceiling of Chimney.

TIP The tank section is attached on the deck only via friction of the Deck Gasket. Always keep the DotShell upside down when out of the dotAIO with a full Reservoir.

English


Coiling! Fasten your coil down on the posts.

TIP The two diagonal, half tube leads on the Deck will help you align the coil properly. Just place your coiling rod along the channel of the leads and then fasten your coil.

TIP Better orient the legs of the coil downside. This will allow a the cotton to cover the legs and b. to position the coil closer to air flow.

TIP You might need to adjust the height of the coil after fastened (eg raise it a tad bit if you have placed an MTL AF pin [accessory kit] inside the Pos Tube.

## Vaping on the DotShell

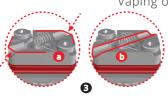



On to wicking. Use the amount of cotton you want based on your setup and coil.

TIP Trim your cotton along the rims of the deck, making sure you don't leave any remains out of the deck perimeter (3a). Also trim any protruding part off the end of the deck channels (3a arrow signs).

TIP These two diagonal, half tube leads on the Deck are again there to serve as cotton nests. After fluffed and primed, cotton should be neatly nested inside the deck channels (3b) with the help of a pointy tool. Make sure you don't leave any cotton outside the channel.

English

Air flow adjustment. Reverse step 1 to put AFCS section back in place.

TIP Air flow is tuned via the AFCS Ring but also depends on the Pos Tube you will select. Stock Pos Tube (preinstalled) is suggested for more open RDL / DL vaping but also serves as a nest for the MTL AF pins [accessory kit]. Spare Pos Tube allows a max of D=2.0mm air hole, thus better for loose MTL / tight RDL vaping.

TIP AFCS section features 4 double (mirrored) air holes. Rotate AFCS Ring to uncover more or less holes

## Vaping on the DotShell

Uncovered AFC hole	Equivalent of single hole diameter under coil (mm)
1st	1.4
1st and 2nd	2.3
1st, 2nd and 3rd	3.1
all holes uncovered	3.8

Chart 1. AFCS Ring tuning guide





Refilling the DotShell.



TIP It is suggested to refill the Reservoir only when the DotShell is insided the dotAIO. This ensures that the tank section will be securely attached to the deck section.

TIP To refill, open the liquid port by lifting the refill cover. Top up, then secure the refill cover back into place.